


Steinmusic CD Enhancer DE2 Starting up, First Use


Placing and Connecting the Device

First, place the device horizontally and stable. After that, please connect the main device and the wall power supply. Therefore, first connect the connecting cable from the wall power supply to the appropriate plug at the back of the device. After that, plug the wall power supply into the main power outlet.

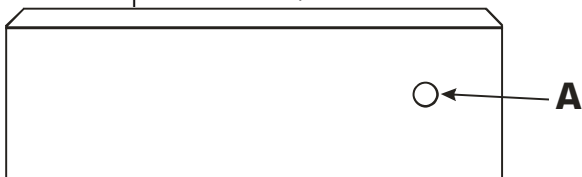

View onto back of the device:
A – plug for connecting cable to the wall power supply

Operational Controls

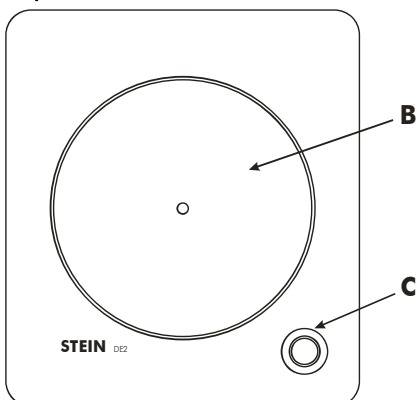

View onto top of device:
B – Area for placing a CD, DVD, SACD etc. or other items to be demagnetised, effective area
C – Button **START** with indicator light

The device features just a single control element beside the power supply connection at the back side.

This is the illuminated button **START** on top. This single button controls all actions.

The illumination of the button **START** signals 2 possible states of operation:



1. indicator light off device is switched off
2. indicator light on device is working

Operation of the Demagnetiser

Operating the demagnetiser is really simple but, the effect can be substantial: Place a CD (or SACD, DVD etc.) on top of the Steinmusic DE 2.

The label points away from the DE 2 and the disc will be centred by a small bolt. If you now press the button **START** the device will be switched on and starts working immediately.

During the demagnetising procedure the button will be illuminated.

Then the light switches off and so indicates the completion of the procedure.

The device now automatically is switched off again.

If you want to treat a second CD right after the first one, simply press the button again.

Similarly to your CDs you may treat interconnecting or speaker cables as well. Just try it segment by segment. Even power supply cables would benefit from such a treatment.

And now have a good time with your new device and during delightful listening sessions.